


winco DELUXE SOUP WARMER

CLEANING & MAINTENANCE

REGULAR CLEANING WILL HELP PROLONG THE SOUP KETTLE'S LIFE AND PRESERVE ITS APPEARANCE.

- Always unplug the kettle when not in use, when filling or when cleaning.
- Spilled food should be removed immediately from painted exterior surfaces and the top collar.
 - ◆ Use a damp soapy cloth.
 - ◆ Do not use harsh or abrasive chemicals or scouring agents.
- The bain marie insert and lid are dishwasher safe.
- Never immerse the appliance in water.

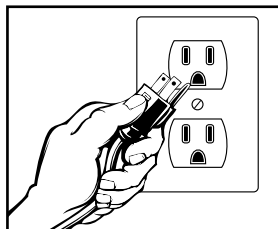

winco DELUXE SOUP WARMER



ESW-66

Use & Care Manual

*Kindly read and keep these instructions.
Product for indoor use only.*

winco DELUXE SOUP WARMER

SPECIFICATIONS

Model #: ESW-66

Capacity: 10 Quarts

Electrical: 120V, 60 Hz; 400W



Read and understand all instructions before using the soup warmer.

CAUTION! SURFACE WILL BE HOT!

WARNINGS

- This appliance is designed for commercial use only.
- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- Never immerse the appliance in water.
- Do not operate the kettle while it is empty.
- Do not overfill the appliance with water.
- Never move or carry the kettle when it is "ON" or if it is full of hot liquids.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a certified service agent or call our customer service number: 1-888-946-2682
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

winco DELUXE SOUP WARMER

OPERATION

CAREFULLY UNPACK THE SOUP KETTLE WARMER AND INSPECT IT FOR DAMAGE.

- Place the warmer on a solid, level surface.
- Use with wet heat only.
 - ◆ Add 20 oz. (0.6 liters) of water to the kettle before placing the bain marie insert into the warmer.
 - ◆ Never over-fill with water. Use the waterline marks at the base of the kettle. Under no circumstances should the bain marie insert float, even when empty. **Do Not** exceed max level.
 - ◆ Remove any excess water immediately.
- Turn the warmer on. The indicator light will glow, showing tht the unit is on.
- Adjust the temperature control dial to correct setting:
 - ◆ Settings 8-12 are designed for initial warm-up
 - ◆ Normal control settings range from 1-8
 - ◆ Once the kettle has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food-safe serving temperatures be used.
- Always keep the hinged lid attached and closed when not serving.

NOTE: This soup kettle warmer is not designed to cook soups or sauces, nor is it designed to rethermalize cold or frozen products.